

Section 1

General Description

The TDM is a multipurpose timing module that can be used for a variety of applications. Its unique design and open architecture allows the TDM to be used in any application that requires timing control of up to two outputs with up to four inputs. Common applications include: simple time delay, vestibule door sequencing (only one device required) and electric lock/automatic door operator sequencing.

Both outputs on the TDM are fully programmable for "on time" duration as well as the delay time between the two outputs from 0 to 99 seconds. The devices to be controlled should be low voltage (12-24V) but can be inductive loads (i.e. magnetic locks, electric exit devices, etc.). Surge suppressors are standard on the TDM—no additional protection is required.

Section 2

Basic Installation

The physical placement of the TDM is typically in the door operator housing area since the power supply and operator control are already in this location. The TDM layout and wiring connections are shown in Figure 1.



CAUTION: Devices to be controlled by the TDM must be low voltage (12-24V) but can be inductive loads. Surge suppressors are standard on the TDM.

Included on the following pages are detailed wiring and programming instructions for three common applications.

Figure 2: Simple Time Delayed Output

Figure 3: Electric Lock & Door Operator Sequencing

Figure 4: Vestibule Door Sequencing

After successfully wiring the TDM for your application, refer to Figure 5 for the operating display explanations and additional programming options. For additional technical assistance, please contact us toll-free at 1-800-842-2545.



NOTICE: These instructions are provided for your convenience. Please verify your installation is in compliance with all local electrical codes.

Section 3

Technical Data

Model.....	TDM
Input Power.....	12-24V AC or DC
Power Consumption.....	2W Maximum
Output Contacts.....	Form C, Rated at 3 Amps
Relay Contact Rating.....	3A:120V AC; 3A:60V DC
Temperature Rating.....	-22 °F to 158 °F (-30 °C to 70 °C)
Weight.....	<0.25 lbs.
Physical Size.....	4.75"L x 2.125"W x 0.75"H


Section 4

Warranty

MS Sedco guarantees this product to be free from manufacturing defects for 1 year from date of installation. Unless MS Sedco is notified of the date of installation, the warranty will be in effect for 1 year from the date of shipment from our factory. If, during the first year, our motion detector or support device fails to operate and has not been tampered with or abused, the unit can be returned prepaid to factory and it will be repaired free of charge. After 1 year, the unit will be repaired for a nominal service charge. **This limited warranty is in lieu of all other warranties expressed or implied, including any implied warranty of merchantability, and no representative or person is authorized to assume for MS Sedco any other liability in connection with the sale of our products. All warranties are limited to the duration of this written warranty. In no event shall MS Sedco be liable for any special, incidental, consequential or other damages arising from any claimed breach of warranty as to its products or services.**

Questions? Call us toll-free at 1-800-842-2545 or visit us online at www.mssedco.com.

FIGURE 1—TDM Layout & Wiring Connections

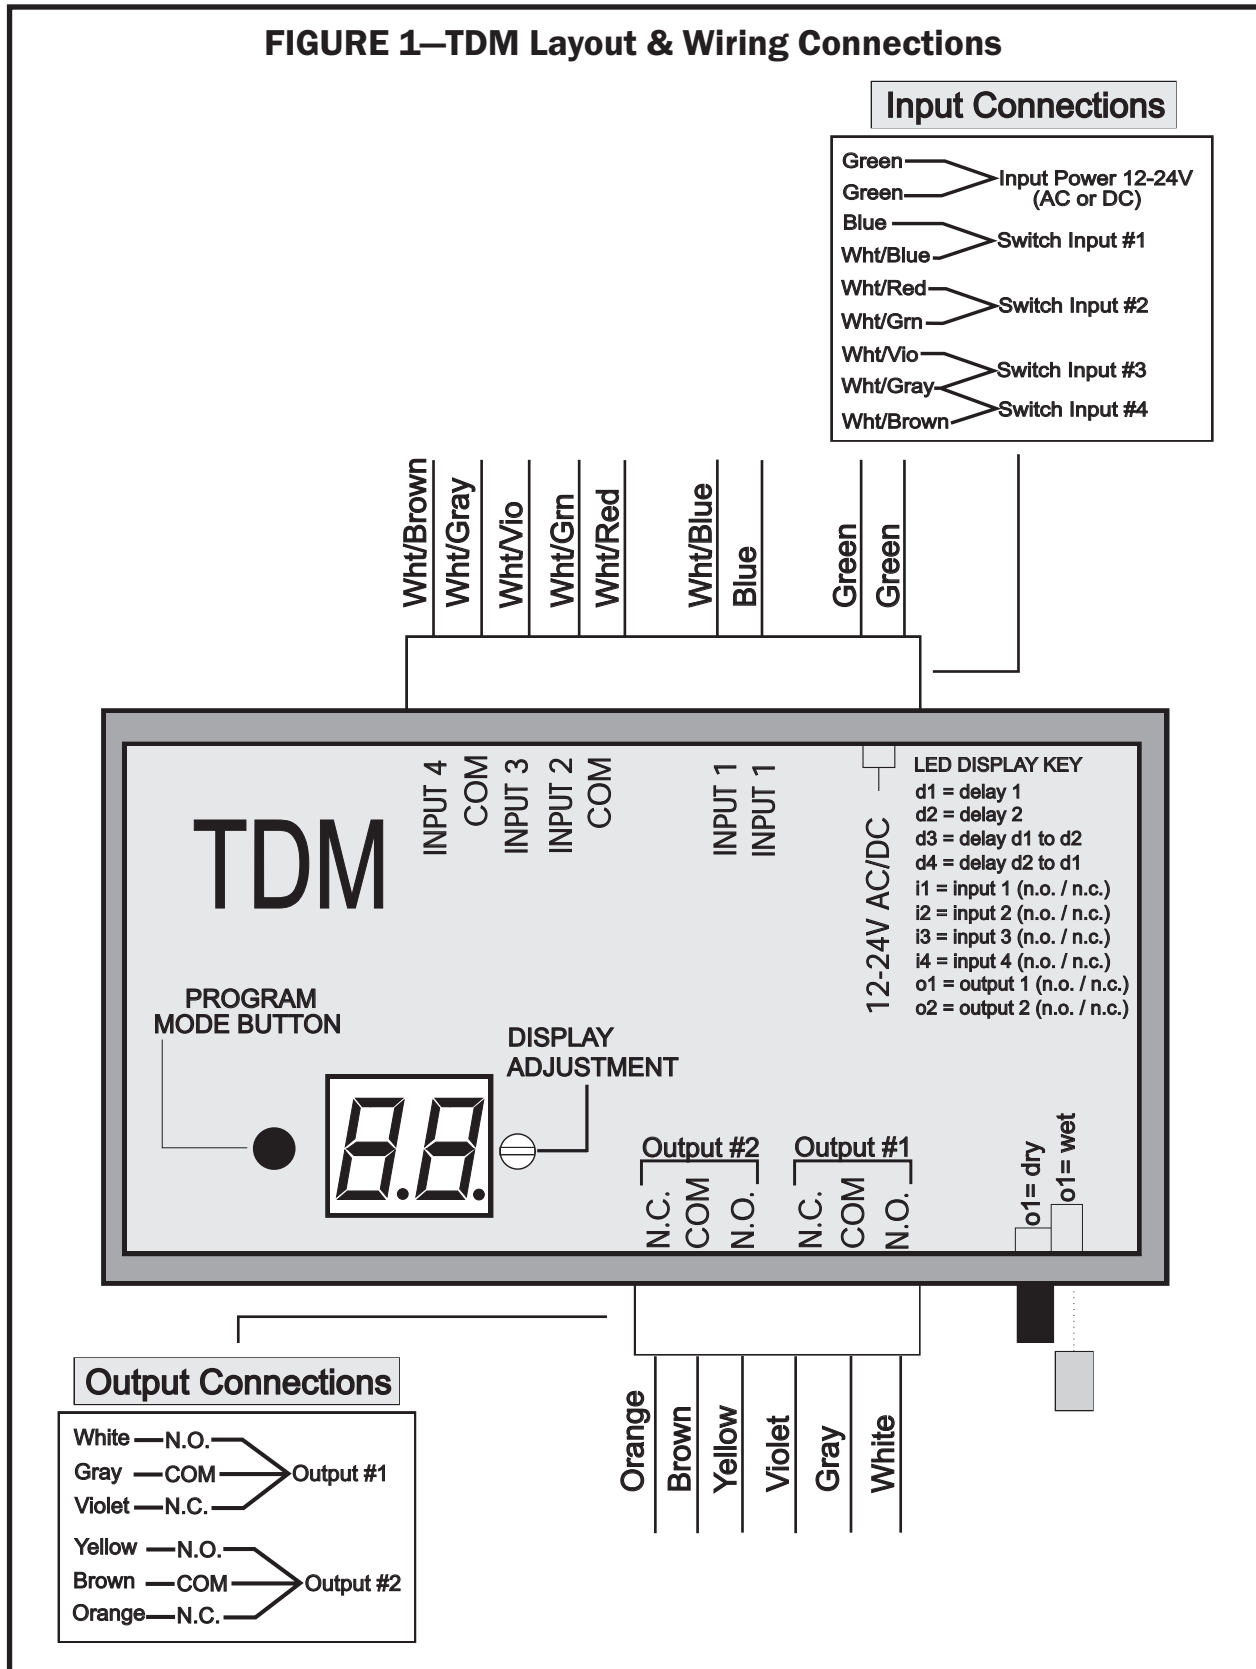

Input Connections


- Green — Input Power 12-24V (AC or DC)
- Blue — Switch Input #1
- Wht/Blue — Switch Input #1
- Wht/Red — Switch Input #2
- Wht/Grn — Switch Input #2
- Wht/Vio — Switch Input #3
- Wht/Gray — Switch Input #3
- Wht/Brown — Switch Input #4

LED DISPLAY KEY
 d1 = delay 1
 d2 = delay 2
 d3 = delay d1 to d2
 d4 = delay d2 to d1
 i1 = input 1 (n.o. / n.c.)
 i2 = input 2 (n.o. / n.c.)
 i3 = input 3 (n.o. / n.c.)
 i4 = input 4 (n.o. / n.c.)
 o1 = output 1 (n.o. / n.c.)
 o2 = output 2 (n.o. / n.c.)


Output Connections

- White — N.O.
- Gray — COM
- Violet — N.C.
- Yellow — N.O.
- Brown — COM
- Orange — N.C.

FIGURE 2—Simple Time Delayed Output

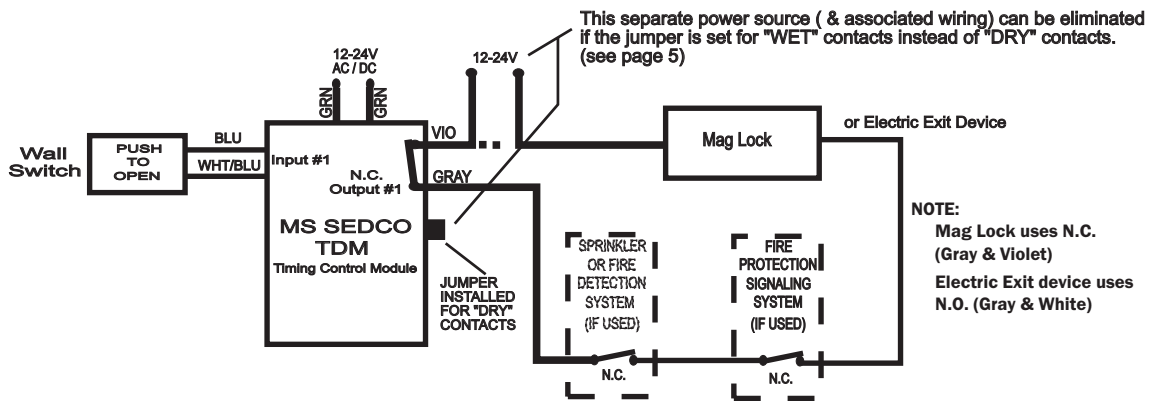


PROGRAMMING PROCEDURE

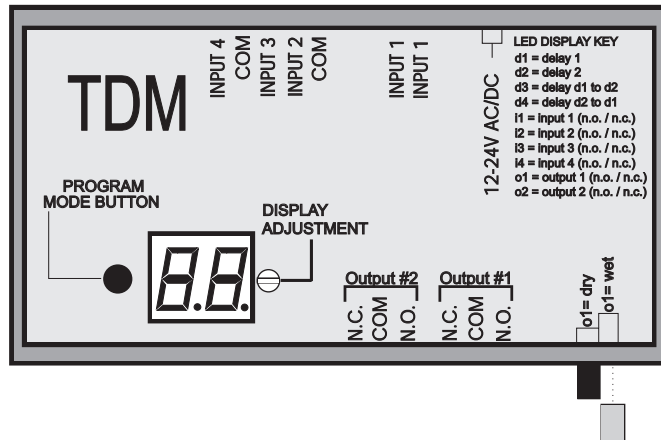


Once the TDM has been wired for the above application, programming of the device is as follows:

- 1) Apply power to the unit, provided there is no smoke or fire, you can assume that your wiring job must be somewhat successful!
- 2) Once properly powered, the display will flash double bars (--) indicating that the unit is in its normal operating ready mode.
- 3) To begin programming, depress the **PROGRAM MODE BUTTON** one time. The first parameter to be programmed will appear on the display. This is the delay time, or "on time" of the output #1 and is displayed as **d1** followed by the time setting (It will flash between the two). To adjust the time setting, use a small screwdriver and rotate the **DISPLAY ADJUSTMENT** clockwise to increase and counterclockwise to decrease the time setting. After the desired value is displayed, depress the **PROGRAM MODE BUTTON** again to save the value. The display will now read **d2**. Now wait 30 seconds until the display again reads double bars (--) indicating that the unit is in its normal operating ready mode.
- 4) You are now ready to test your installation. If the time delay has to be changed, make the change to the **d1** setting, press the **PROGRAM MODE BUTTON** once and then wait 30 seconds until the double bars appear again.
- 5) During operation of the unit, the display will indicate its operating status. Please refer to Figure 5 at the end of this installation manual.

FIGURE 3—Electric Lock and Door Operator

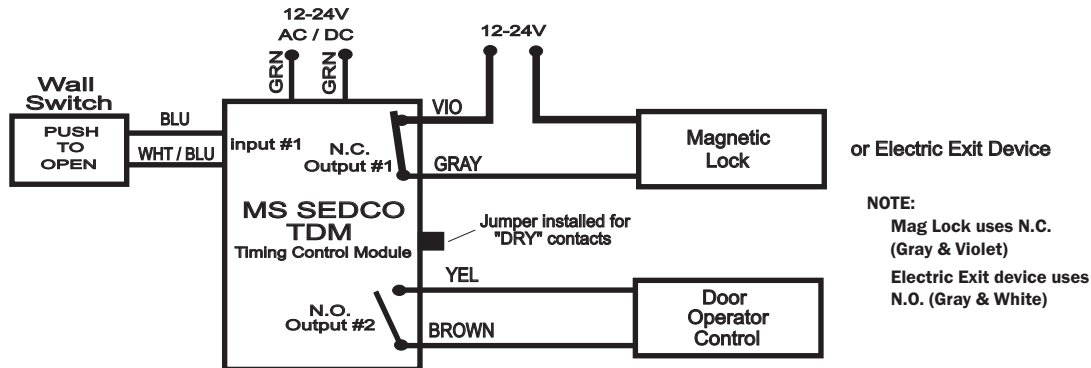


PROGRAMMING PROCEDURE

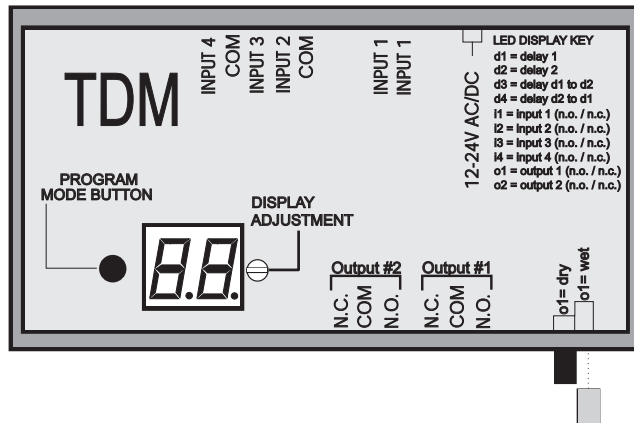


Once the TDM has been wired for the above application, programming of the device is as follows:

- 1) Apply power to the unit. The display will flash double bars (--) indicating that the unit is in its normal operating ready mode.
- 2) To begin programming, depress the **PROGRAM MODE BUTTON** one time. The first parameter to be programmed will appear on the display. This is the delay time, or "on time" of the output #1 and is displayed as **d1** followed by the time setting of **2.0** which indicates 2.0 seconds (It will flash between the two). This is the time duration that you want the Electric Lock released (It's usually set around 2-3 seconds). To adjust the time setting, use a small screwdriver and rotate the **DISPLAY ADJUSTMENT** clockwise to increase and counterclockwise to decrease the time setting. After the desired value is displayed, depress the **PROGRAM MODE BUTTON** again to save the value. The display will now read **d2**. **d2** is the delay time or "on time" of output #2. This is the time setting that you want for the door (operator) to remain open. This is usually set around 3-5 seconds. To adjust the setting, rotate the **DISPLAY ADJUSTMENT** until the desired value is displayed and then depress the **PROGRAM MODE BUTTON**. The display should then read **d3**. This is the setting for the delay time between the release of the Electric Lock and the opening of the door. This time is usually set around 0.5-1 second. Again, adjust the setting and then depress the **PROGRAM MODE BUTTON**. The display should now read **d4**. Now wait 30 seconds until the double bars (--) appear, indicating that the unit is in its normal operating ready mode. ***NOTE: d1 should be longer than d3.**
- 3) You are now ready to test your installation. If any of the time settings need to be changed, make the change and press the **PROGRAM MODE BUTTON** once to lock in the new value. Then wait 30 seconds until the double bars appear again, indicating that the unit is in its normal operating mode.
- 4) During operation of the unit, the display will indicate its operating status. Please refer to Figure 5 at the end of this installation manual.

FIGURE 4—Vestibule Sequencing

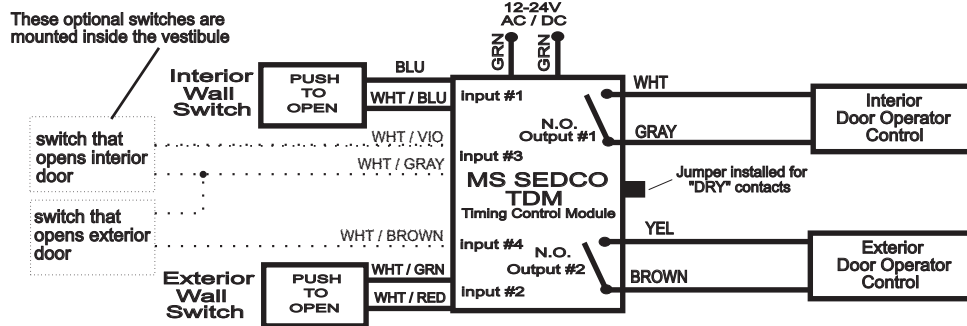

PROGRAMMING PROCEDURE

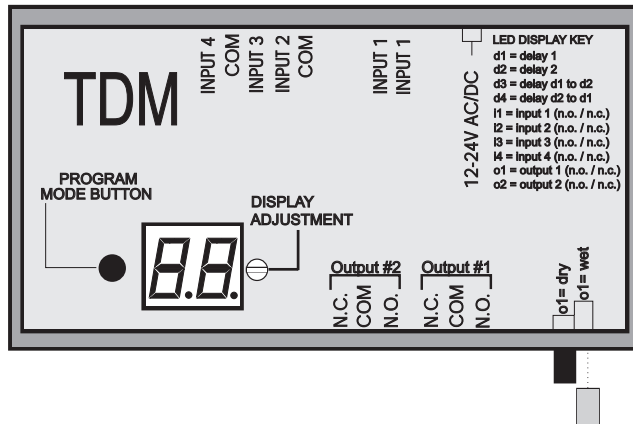

Once the TDM has been wired for the above application, programming of the device is as follows:

- 1) Apply power to the unit. The display will flash double bars (--) indicating that the unit is in its normal operating ready mode.
- 2) To begin programming, depress the **PROGRAM MODE BUTTON** one time. The first parameter to be programmed will appear on the display. This is the delay time, or "on time" of the output #1 and is displayed as **d1** followed by the time setting of **2.0** which indicates 2.0 seconds (It will flash between the two). This is the time duration that you want the interior door to remain open (It's usually set around 4-5 seconds). To adjust the time setting, use a small screwdriver and rotate the **DISPLAY ADJUSTMENT** clockwise to increase and counterclockwise to decrease the time setting. After the desired value is displayed, depress the **PROGRAM MODE BUTTON** again to save the value. The display will now read **d2**. **d2** is the delay time or "on time" of output #2. This is the time setting that you want for the exterior door to remain open. This is usually set around 4-5 seconds. To adjust the setting, rotate the **DISPLAY ADJUSTMENT** until the desired value is displayed and then depress the **PROGRAM MODE BUTTON**. The display should then read **d3**. This is the setting for the delay time between the activation of the interior door and the exterior door. This time is usually set around 1-4 seconds. Again, adjust the setting and then depress the **PROGRAM MODE BUTTON**. The display should now read **d4** and is the delay time between the opening of the doors going in the opposite direction. Adjust this value in the same manner as before. When the **PROGRAM MODE BUTTON** is depressed, **I1** will then be displayed. Now wait 30 seconds until the double bars (--) appear, indicating that the unit is in its normal operating ready mode.
- 3) You are now ready to test your installation. If any of the time settings need to be changed, make the change and press the **PROGRAM MODE BUTTON** once to lock in the new value. Then wait 30 seconds until the double bars appear again, indicating that the unit is in its normal operating mode.
- 4) During operation of the unit, the display will indicate its operating status. Please refer to Figure 5 at the end of this installation manual.

FIGURE 5—Operation Display & Additional Programming Options

When the unit is operating, the display will indicate which output is active for the duration of its programmed time delay. For relay output #1, a **1** will be displayed and **2** will be displayed for relay output #2. If the delays d3 or d4 are used (such as an installation using a Mag Lock or a Vestibule application), the delay will be evident between the displaying of both outputs.

In addition to the settings already described in the previous sections, below is a listing of various options which are programmable on the TDM. The LED display vs. function are as follows:

- = Ready Mode (flashing)
- d1** = Time Delay or "ON TIME" of relay output #1—0.0 to 99 seconds
- d2** = Time Delay or "ON TIME" of relay output #2—0.0 to 99 seconds
- d3** = Time Delay between d1 and d2—0.0 to 99 seconds
- d4** = Time Delay between d2 and d1—0.0 to 99 seconds
- i1** = Switch Input #1—(N.O. or N.C.)
- i2** = Switch Input #2—(N.O. or N.C.)
- i3** = Switch Input #3—(N.O. or N.C.)
- i4** = Switch Input #4—(N.O. or N.C.)
- o1** = Relay Output #1—(N.O. or N.C.)
- o2** = Relay Output #2—(N.O. or N.C.)
- = Error (flashing)

The **PUSHBUTTON FAULT INDICATOR** is a special feature designed to alert the installer if a pushbutton is "stuck" in the active position or if the wires have shorted. If this occurs, the display will flash double dots (••). Additionally, this could mean that the wiring did not match the programmed parameter. In other words, the unit may be programmed for use with a normally open switch, but may be wired to a normally closed switch. Normal operation will resume once the fault condition has been cleared.

The TDM has the option of supplying power to relay output #1 contacts. This is known as "WET" contacts instead of the conventional "DRY" contacts or simple contact closure. Providing this voltage can simplify the wiring of installations where an Electric Locking device is used. However, the voltage supplied to the output is the same voltage supplied to the input of the TDM and must be compatible with the Locking device to be controlled. Please contact the factory for additional information.